


In this manual we describe how you can place the Givt transmitters at fixed points and what to look out for.

To make communication about the Givt transmitters easier, each Givt transmitter has its own identity number. This consists of a sticker with a number (ED02:xxxx) on it.

In addition, a sticker is provided on which the goal of the donation can be described.

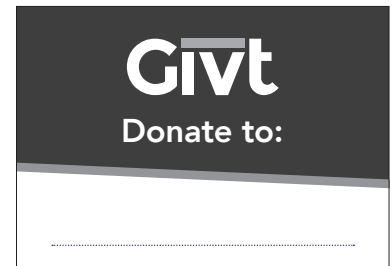


NECESSITIES

Provided by Givt:
Transmitter + sticker
with number



+

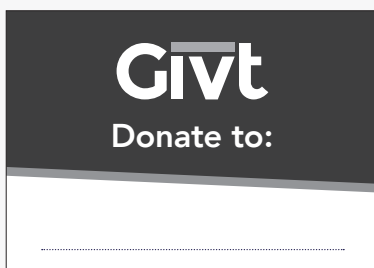

1 Clean the surface




2 Remove the film layer from the transmitter



3 Attach the transmitter itself onto the fixed point

4 Place the sticker belonging to the transmitter

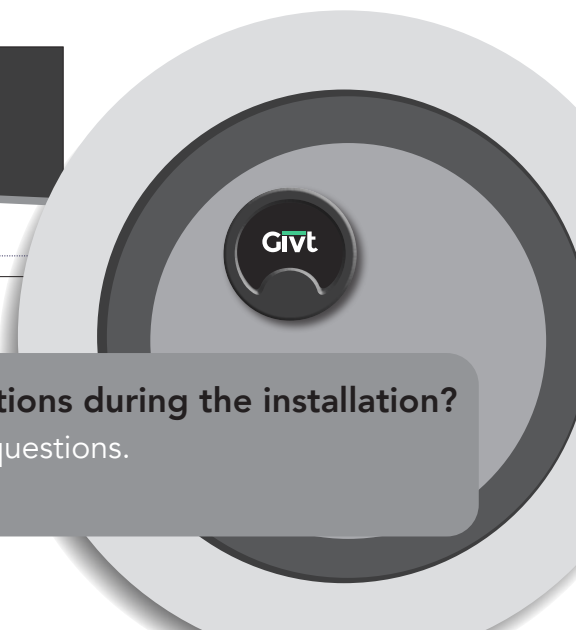


Are you facing problems or do you have questions during the installation?

Contact us! We are happy to help you with all your questions.

support@givtapp.net / 020 3790 8068

Conditions for placing fixed transmitters

Provide at least 2.5 meters distance between the fixed transmitters. Also maintain this distance in relation to the room where the mobile transmitters are used.

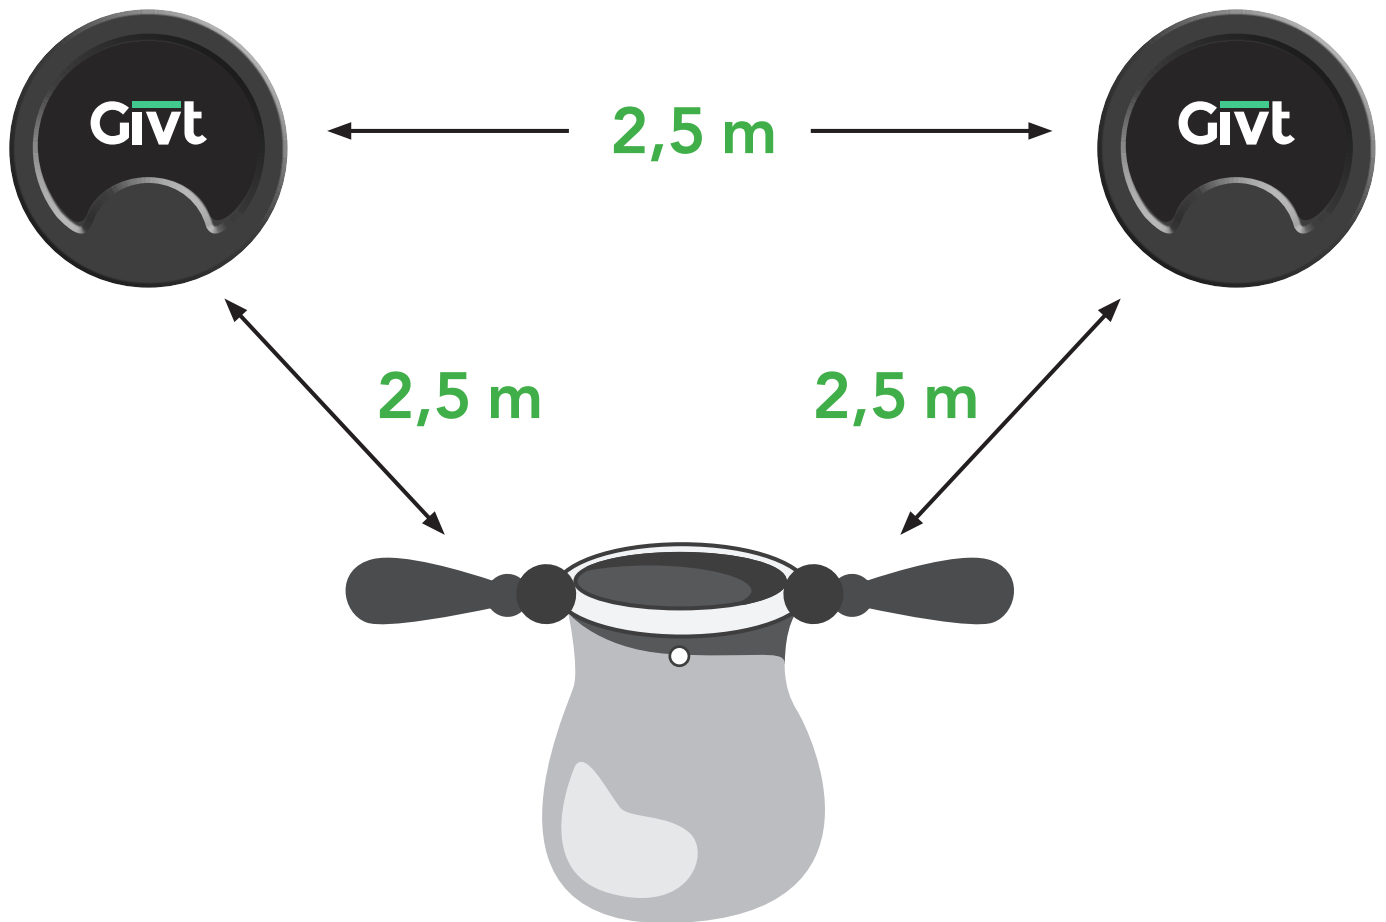

Do not place the transmitter **in** a metal box or container

